

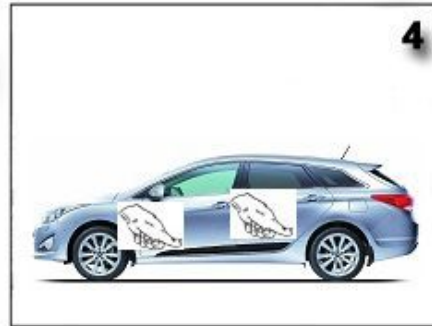
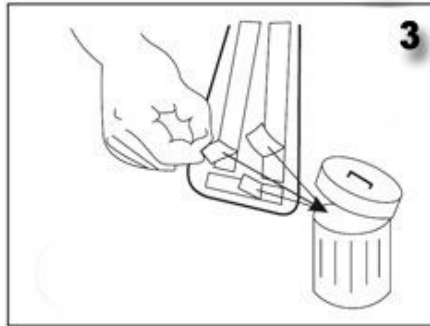


Hyundai i40 CW 2011 → PU Side Mouldings F-39

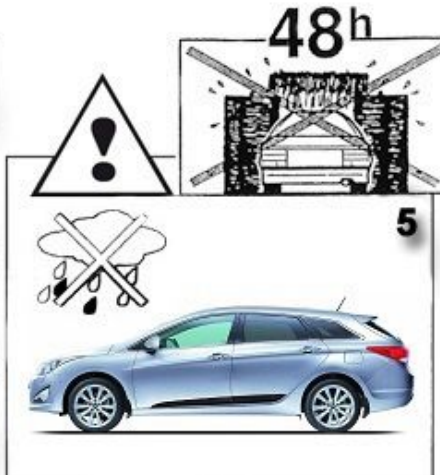

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

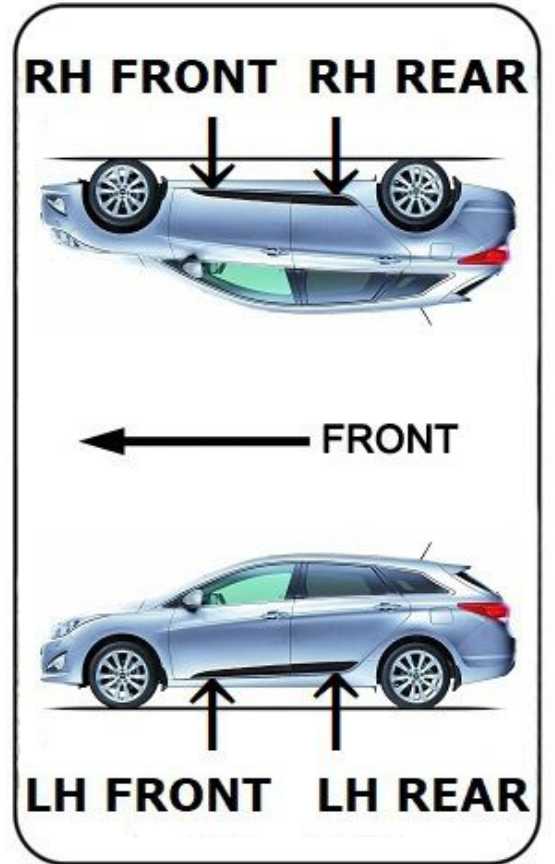