


Subaru Outback 2011→ PU Side Mouldings F-11

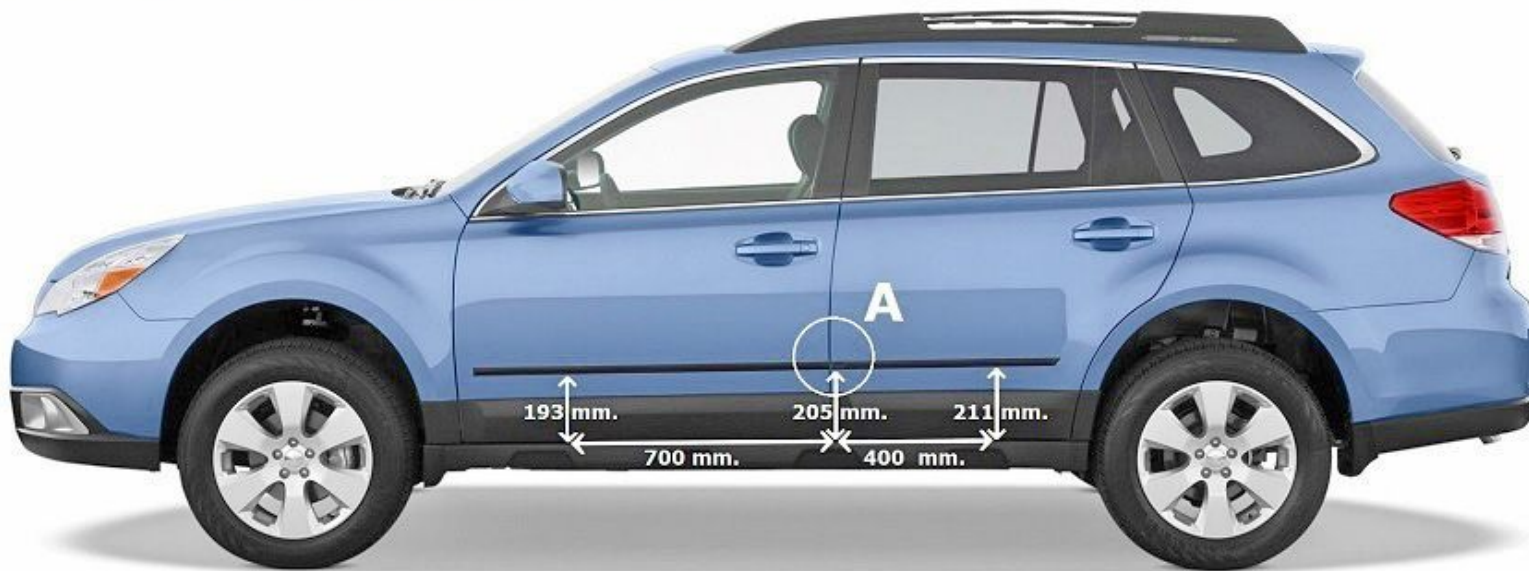




RH FRONT RH REAR



← FRONT



LH FRONT LH REAR

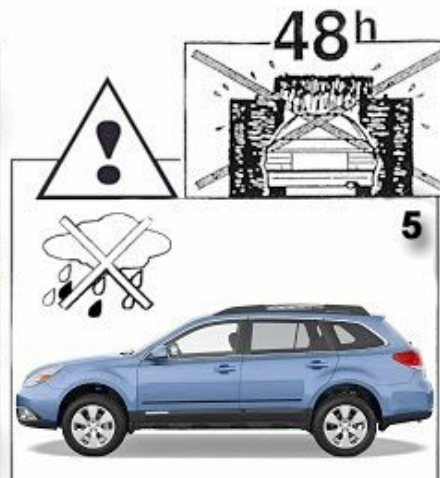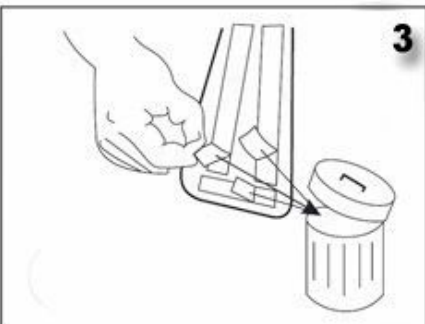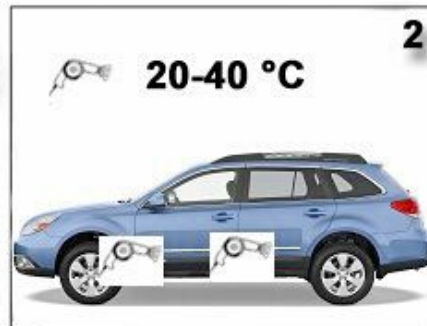

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

