
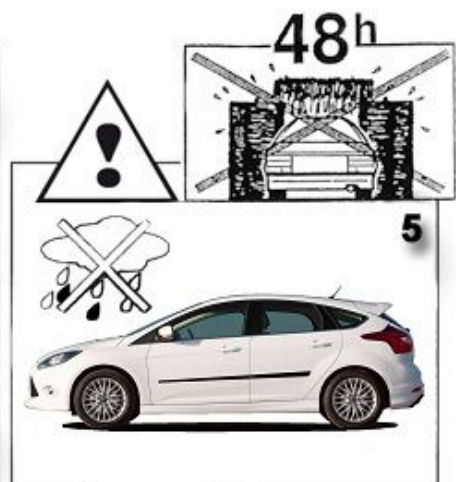
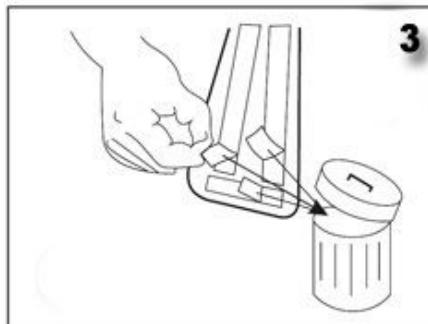
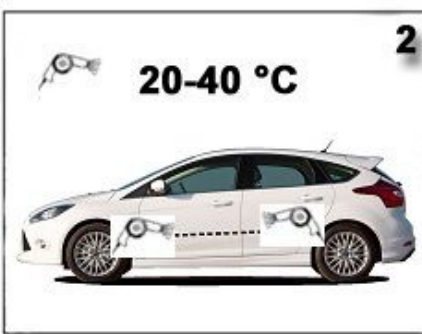
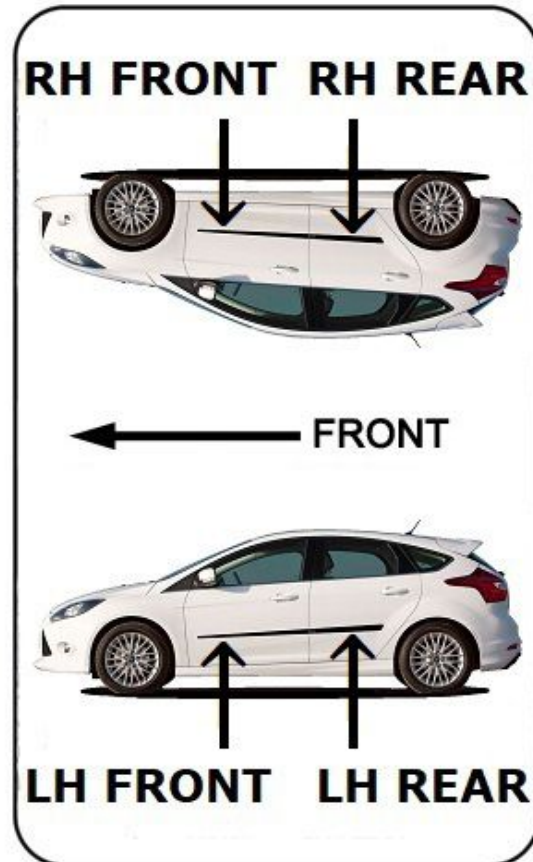


Ford Focus Mk III 2011-15

PU Side Mouldings

F-14

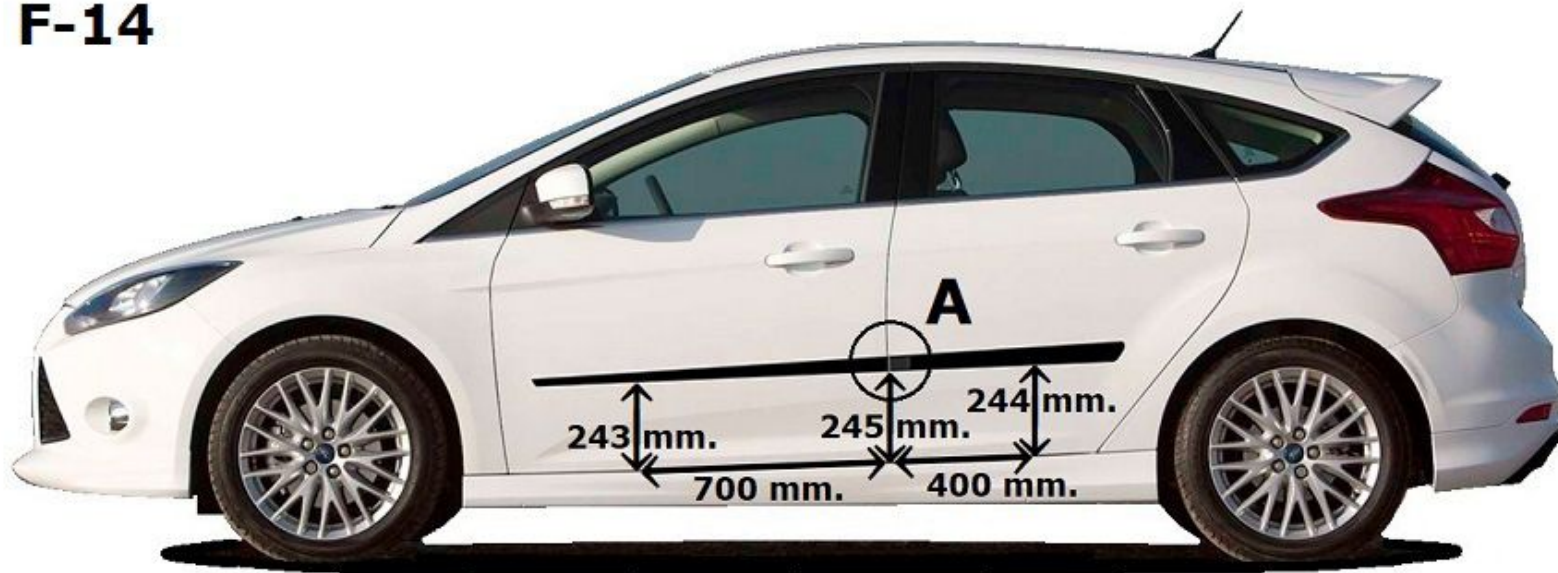

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

