
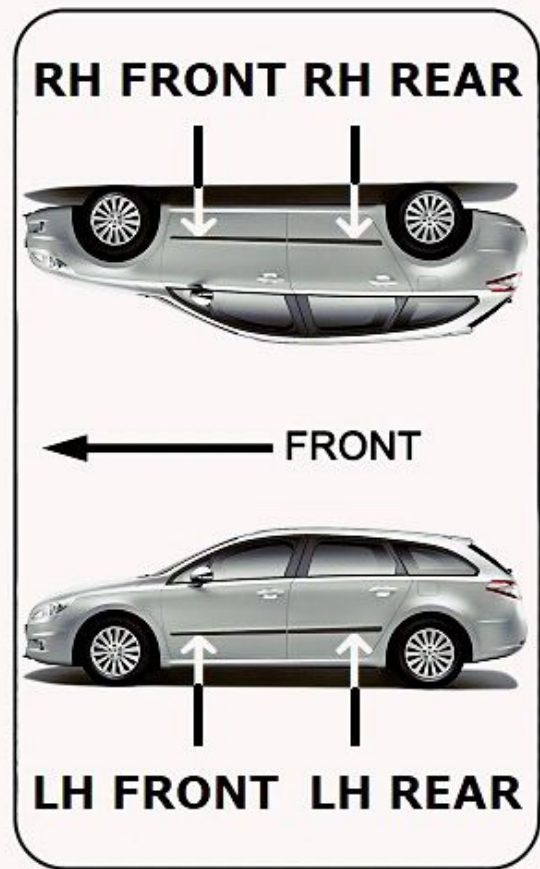


Peugeot 508 SW 2011 → PU Side Mouldings

F-16

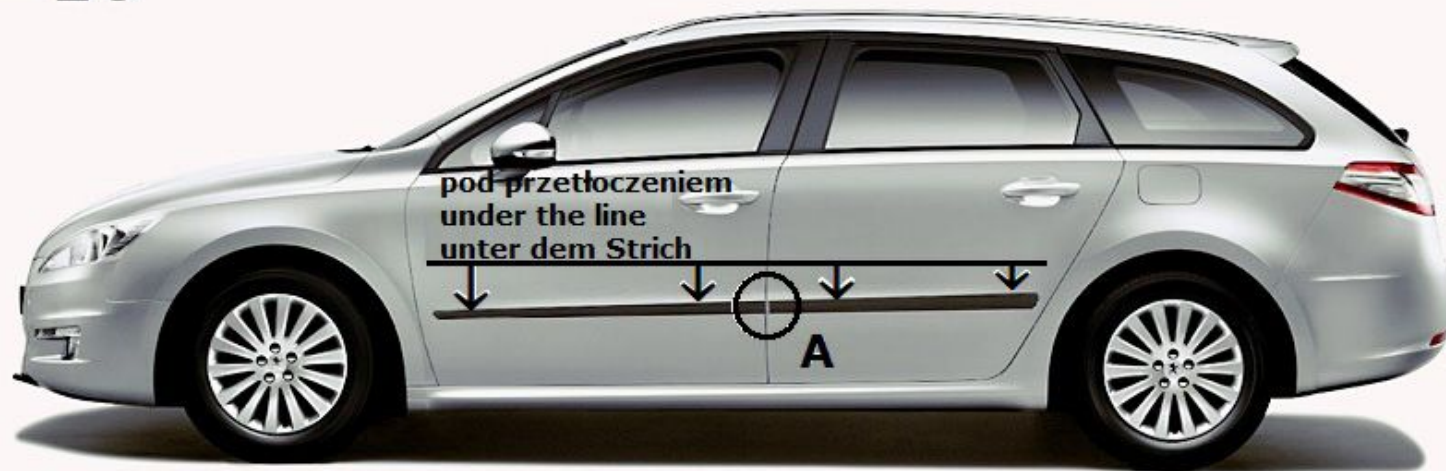

1
Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

2
20-40 °C

3
48h

4
5

3

4

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

