
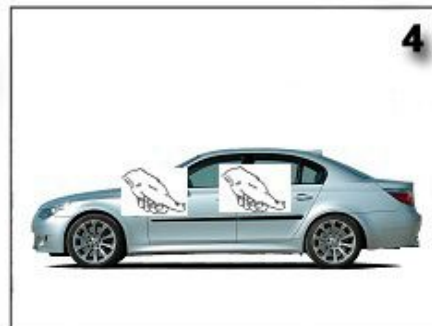
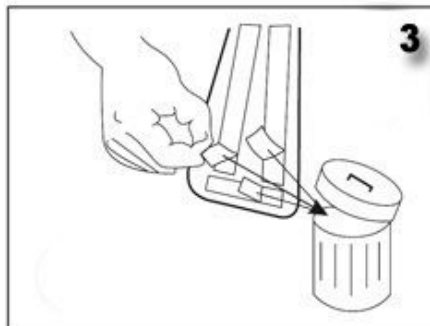
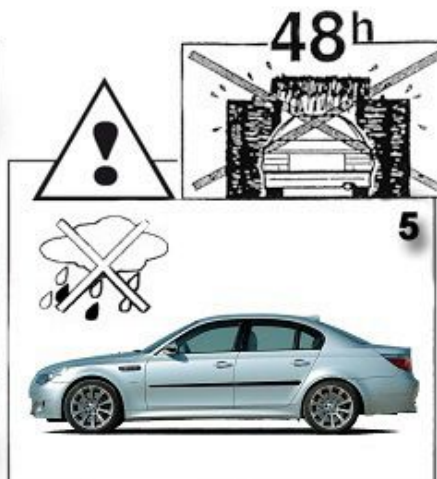
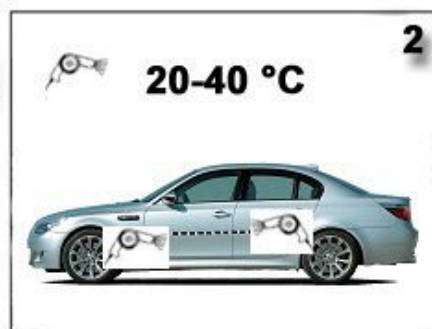
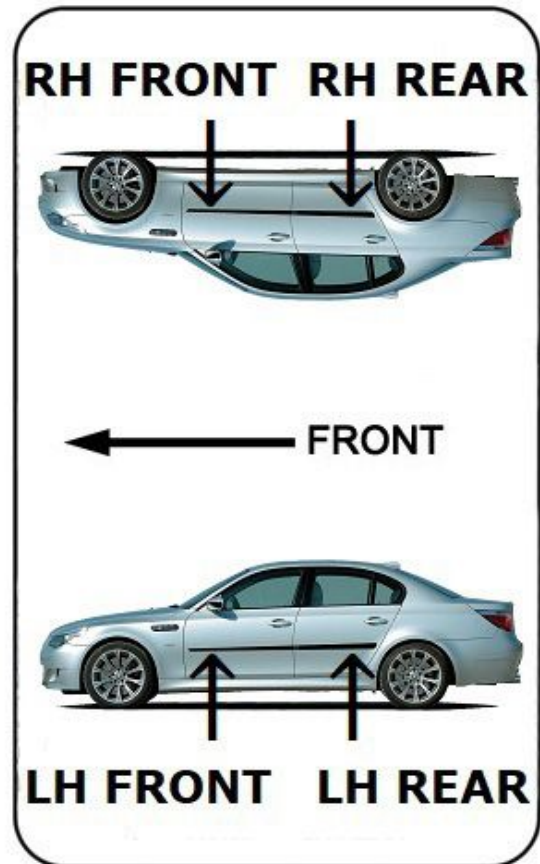


BMW 5 2003-10

PU Side Mouldings

F-15

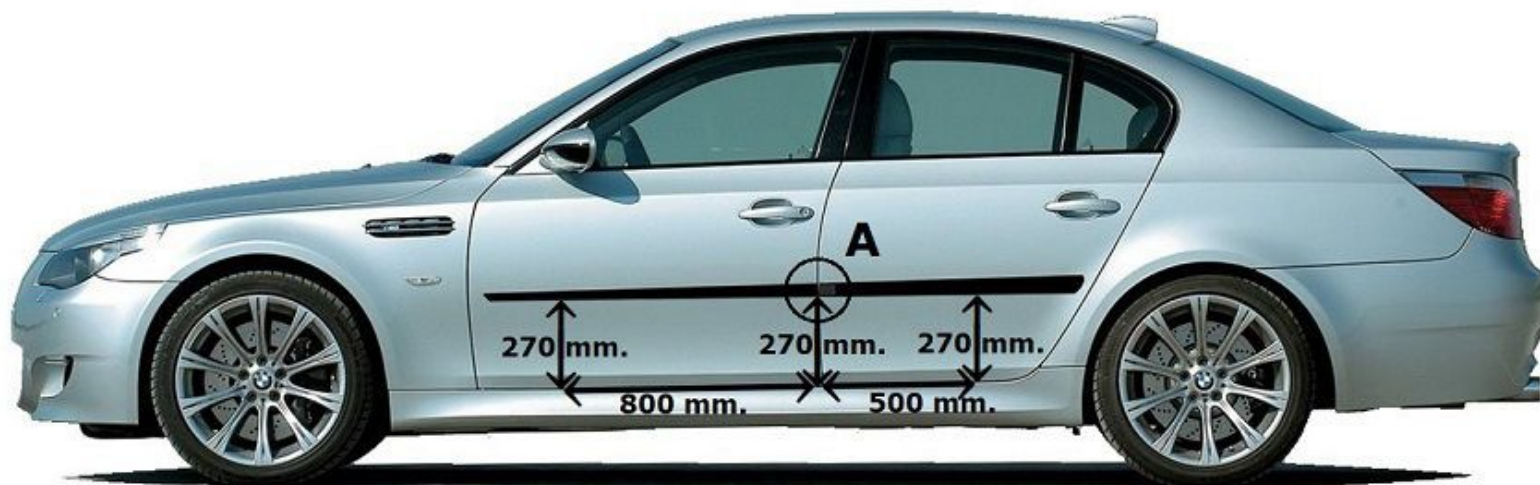

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrucken jeden cm !!

