


# Mazda 6 SW/Kombi 2013→

## PU Side Mouldings

### F-16/14

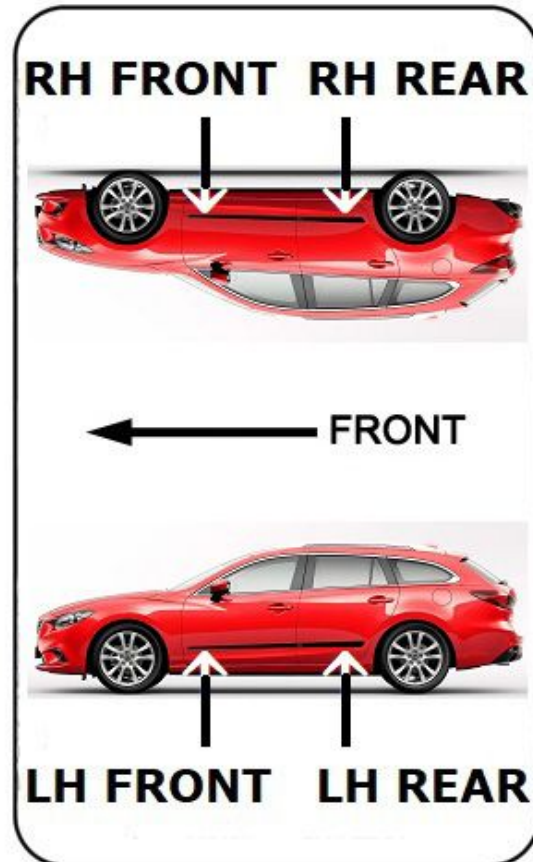

1  
Degrease/entletten/degraisser/ontvetten  
Alcohol/Alkohol/Alcool/Alcohol

2  
20-40 °C

3  
48h

4  
5

3

4

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

