
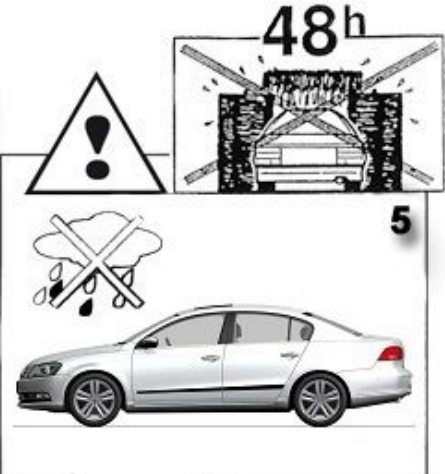
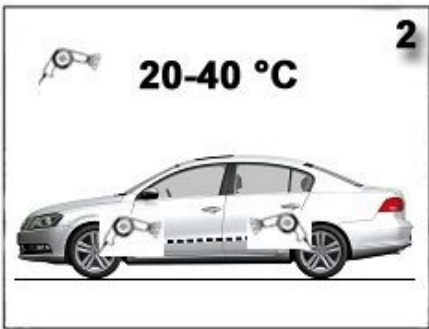


Volkswagen Passat B7 2010→14

PU Side Mouldings

F-16/20

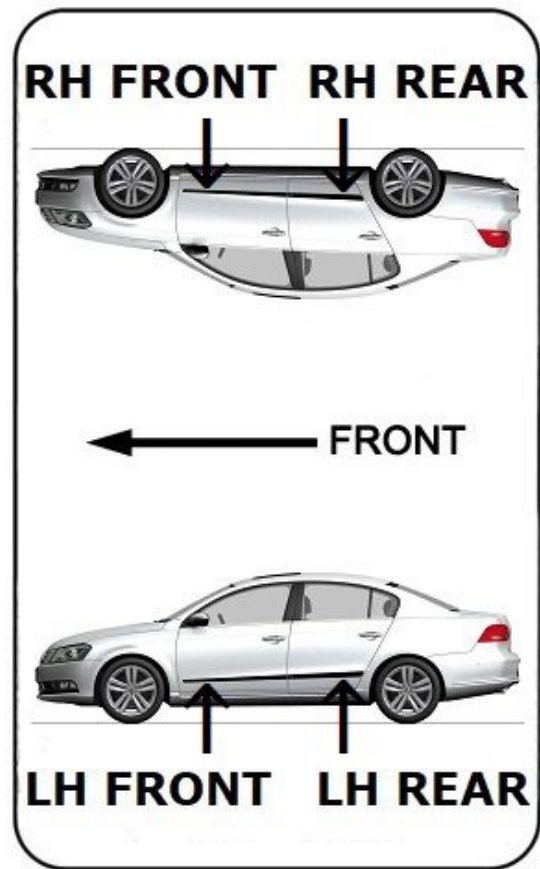

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

