

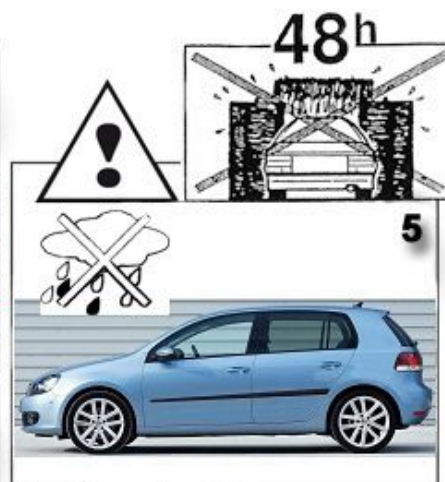
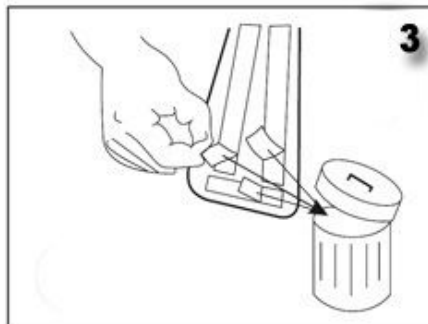
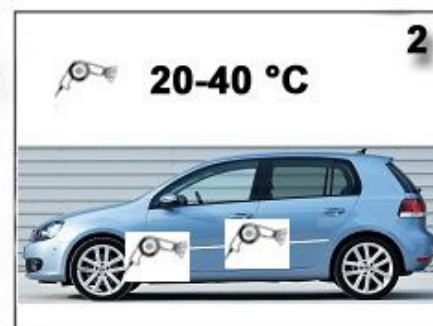


Volkswagen Golf VI 2008-11

PU Side Mouldings F-20

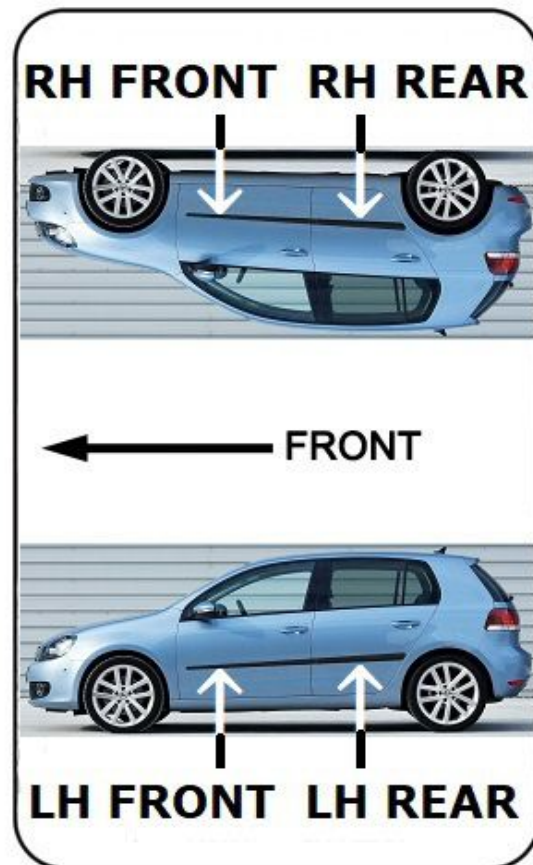

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

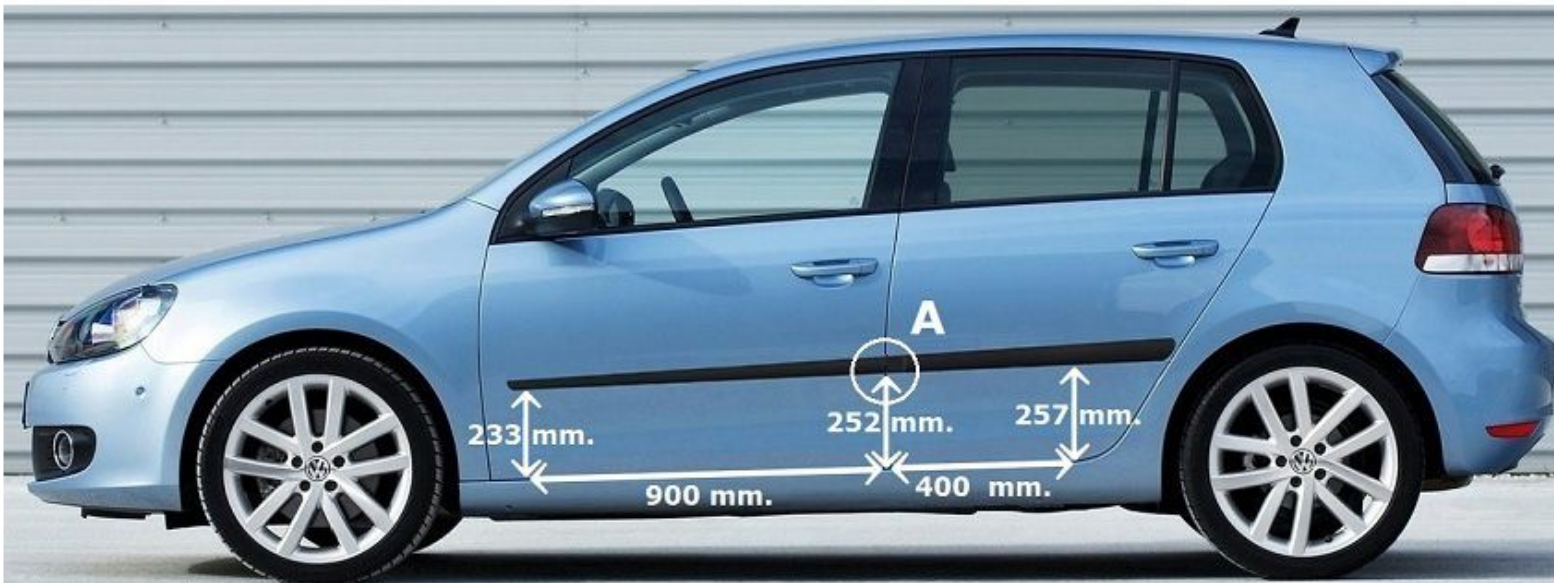