
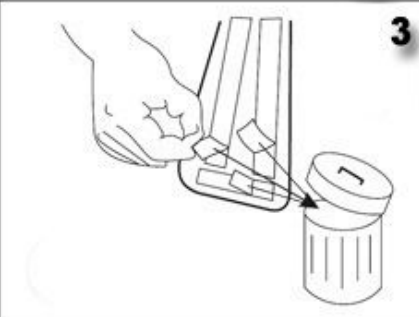
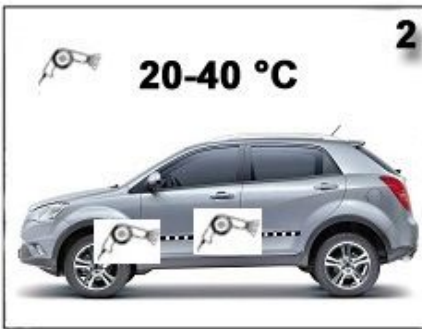
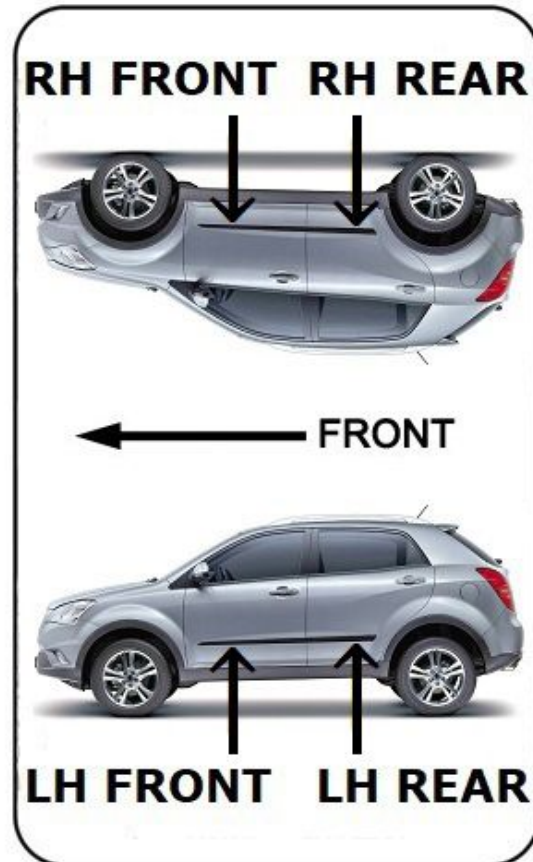


SsangYong Korando 2011-16

PU Side Mouldings

F-21

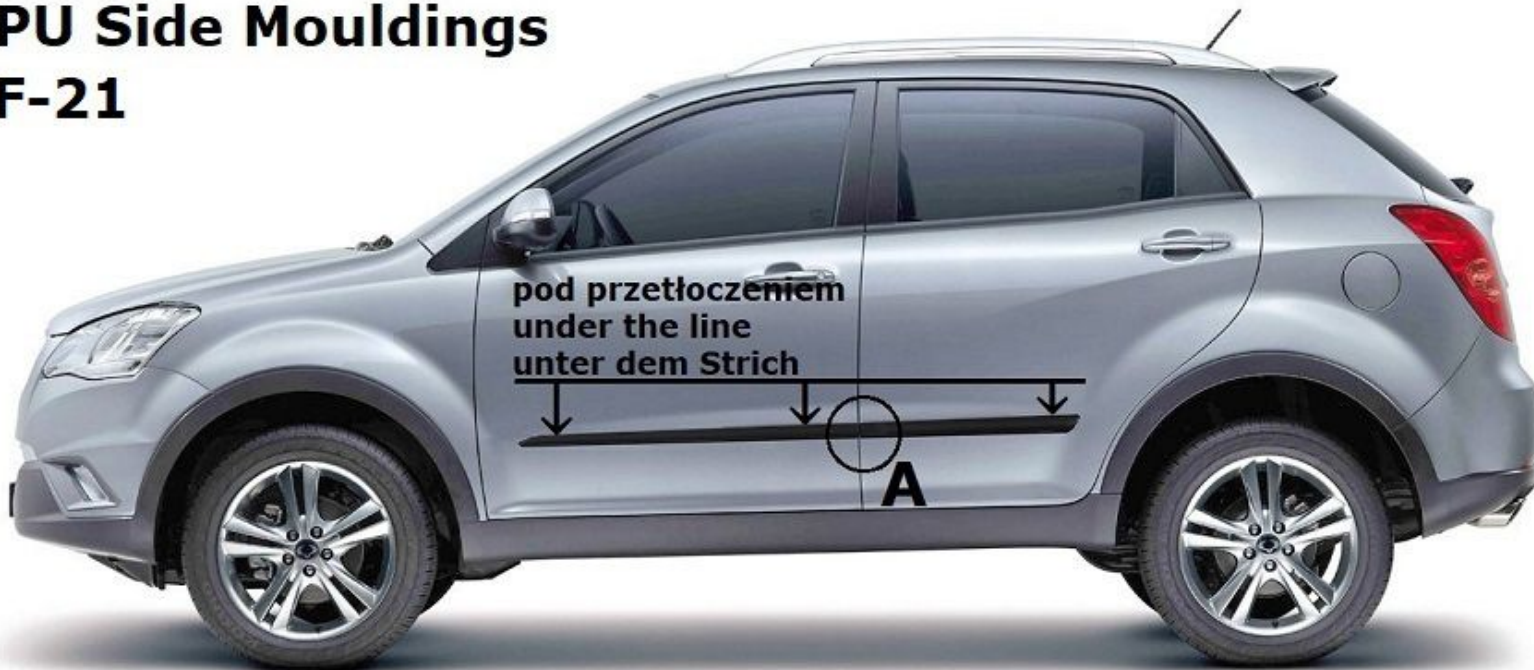

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

