
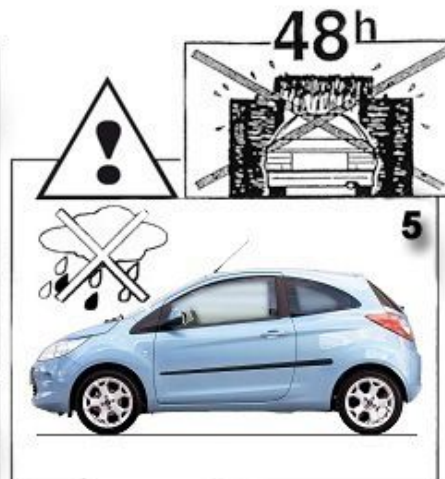
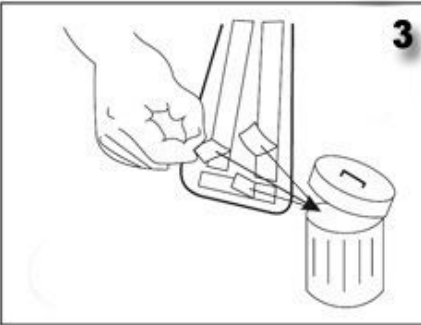
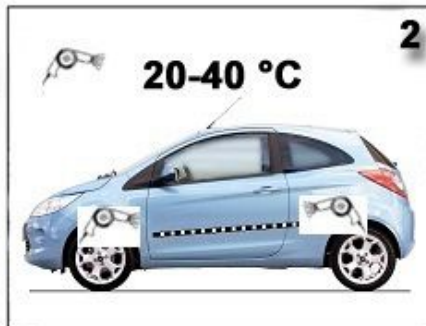
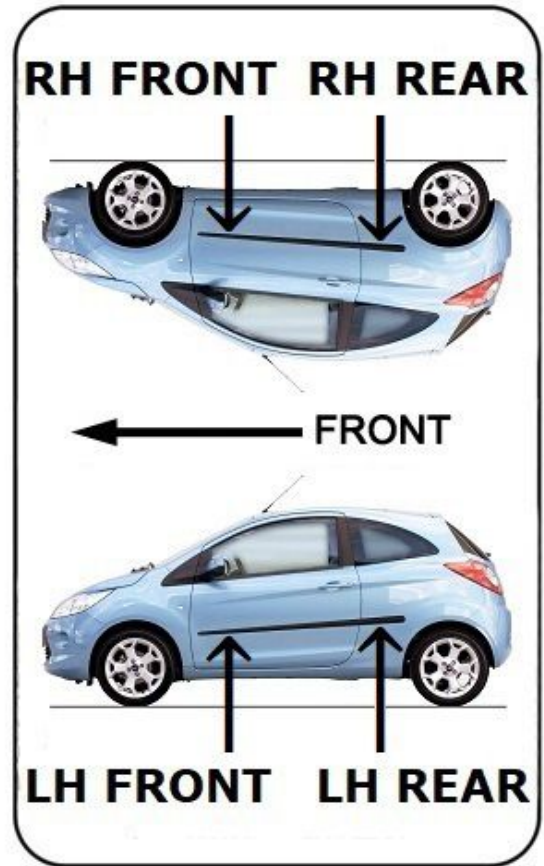


# Ford Ka 2008-16

## PU Side Mouldings

### F-25

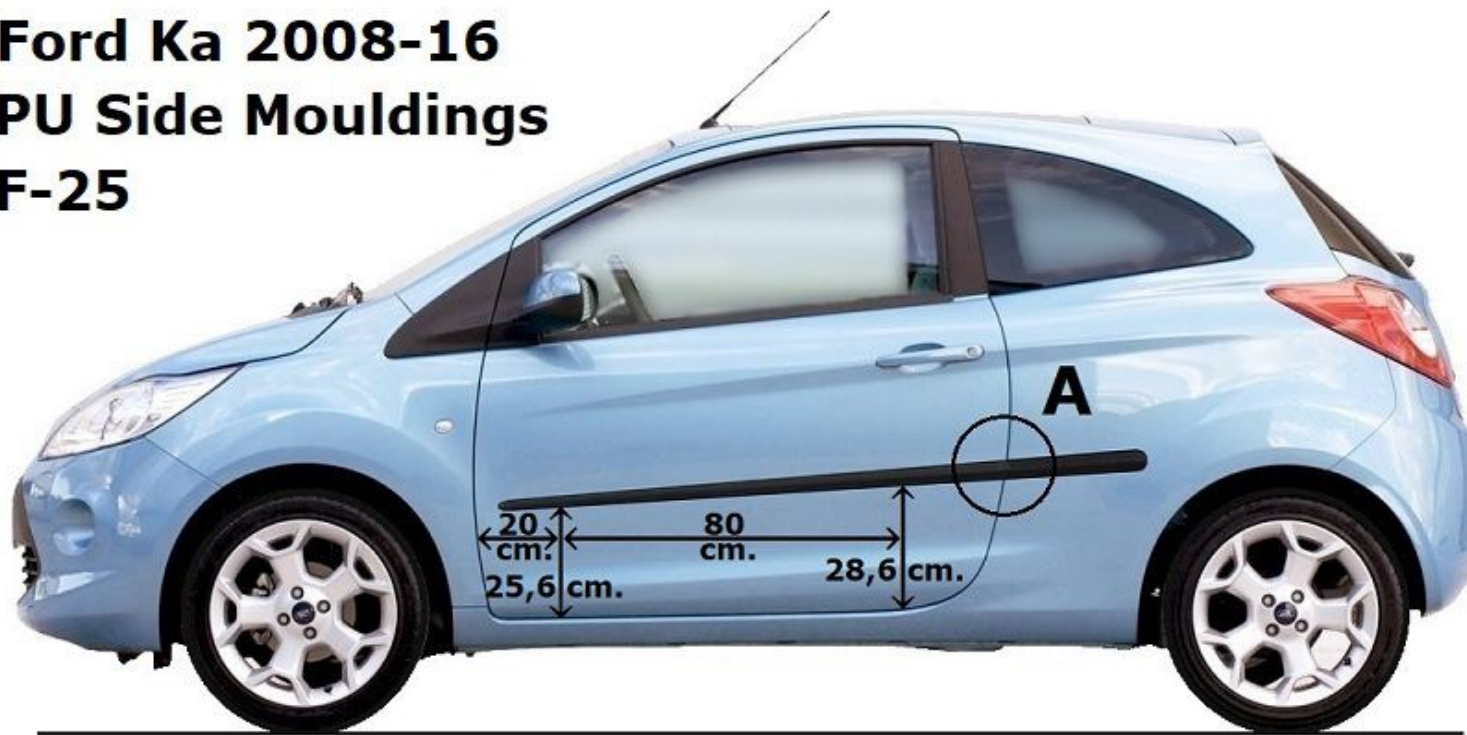

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrucken jeden cm !!

