
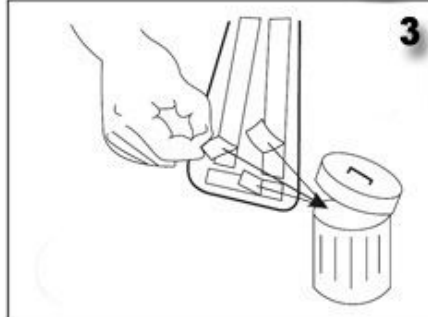
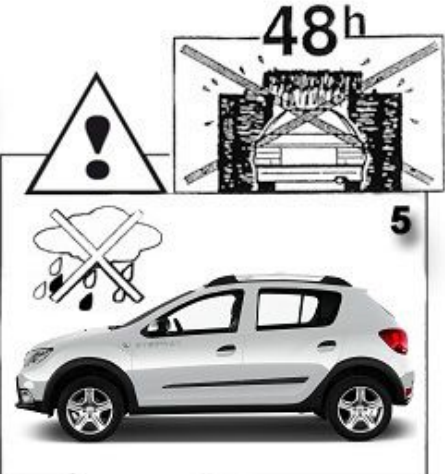
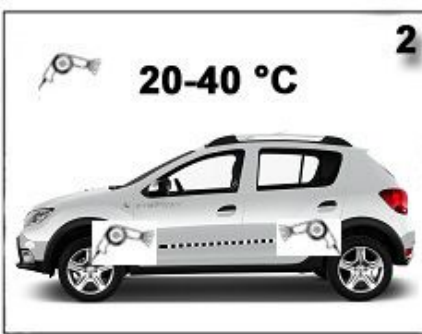
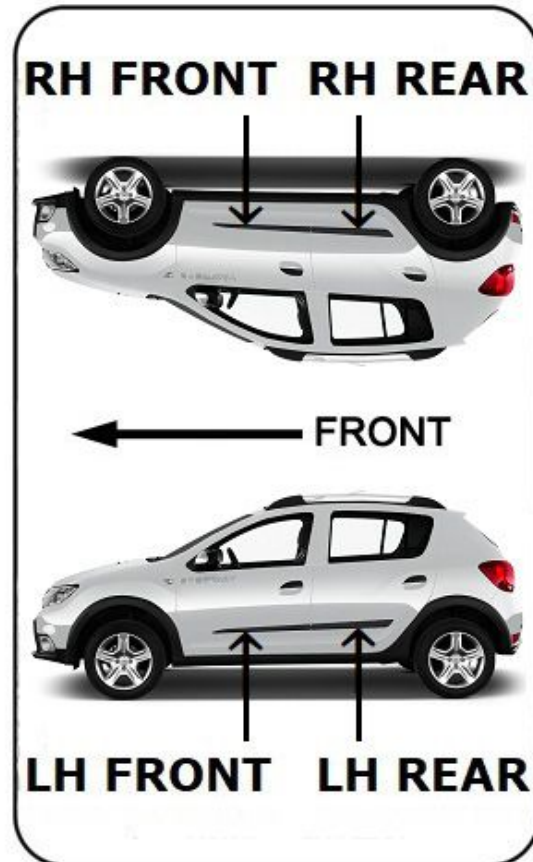


# Dacia Sandero Stepway II 2013 →

## PU Side Mouldings

### F-31

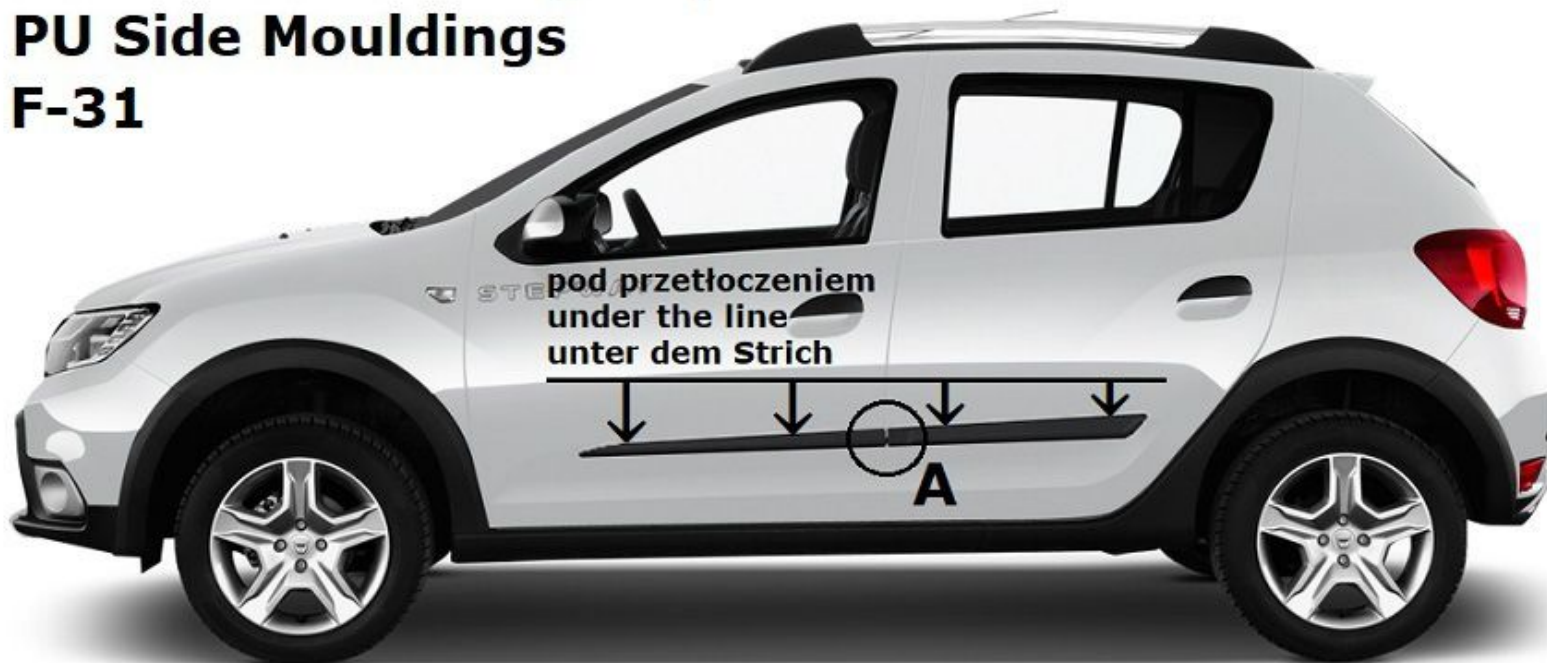

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

