


Seat Toledo 2013 → PU Side Mouldings F-46

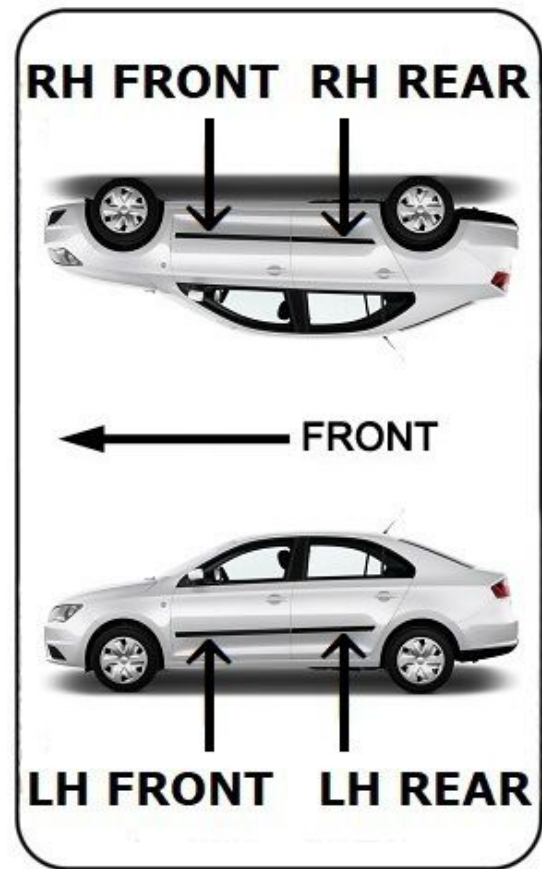

nad przetłoczeniem
over the line
über dem Strich



1
Degrease/entletten/degraisser/ontvetten
Alcohol/Alkohol/Alcool/Alcohol

2
20-40 °C

48h

5

3

4

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

