

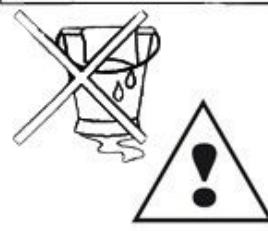
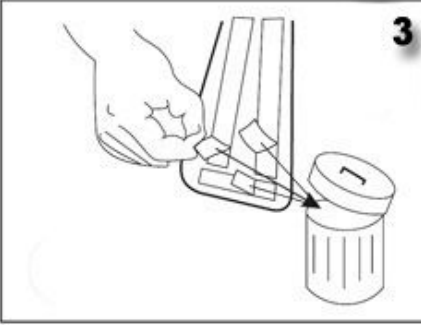
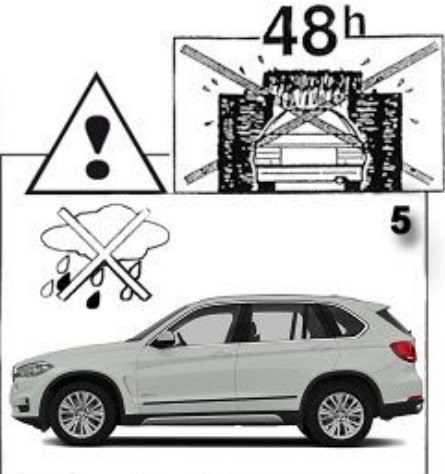


# BMW X5 2014→ PU Side Mouldings F-11

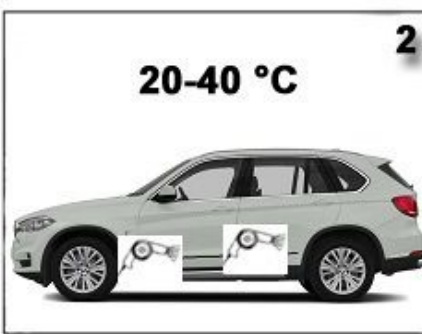

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrucken jeden cm !!

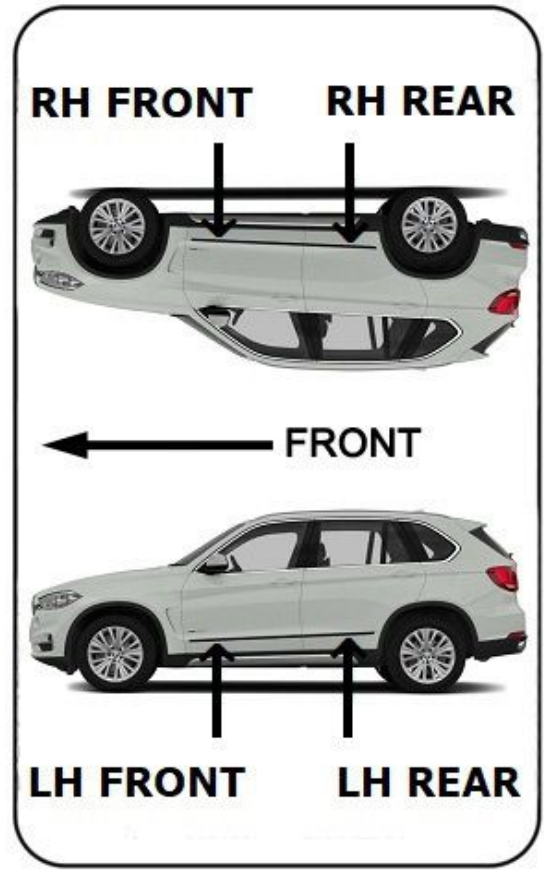