
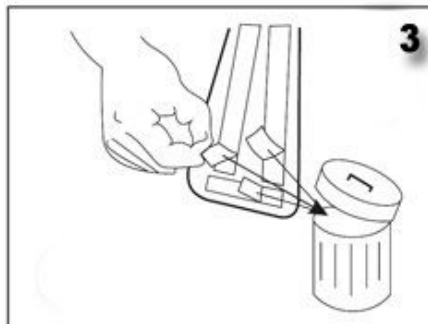
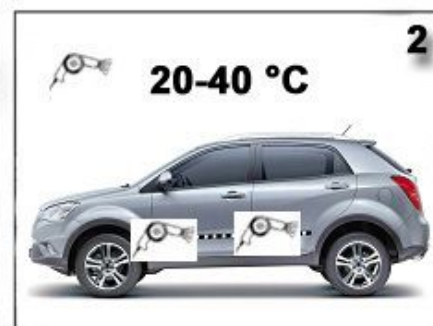
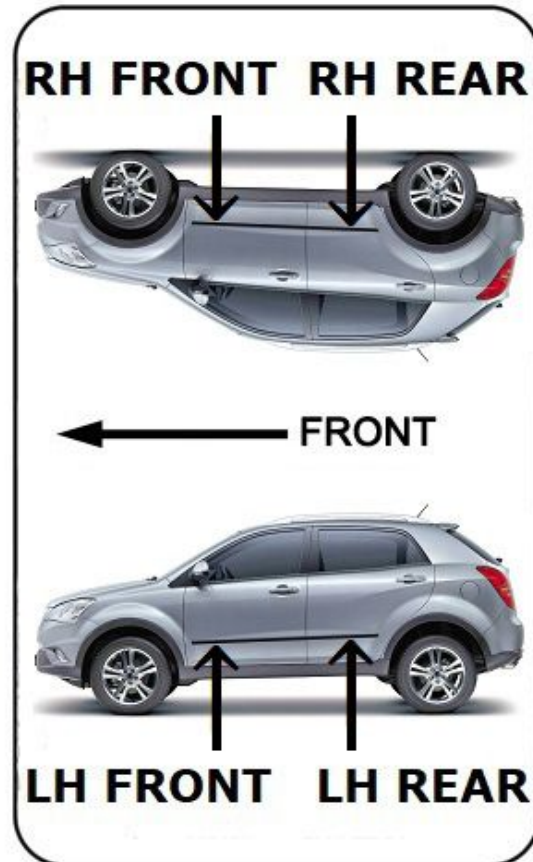


# SsangYong Korando 2011-16

## PU Side Mouldings

### F-35

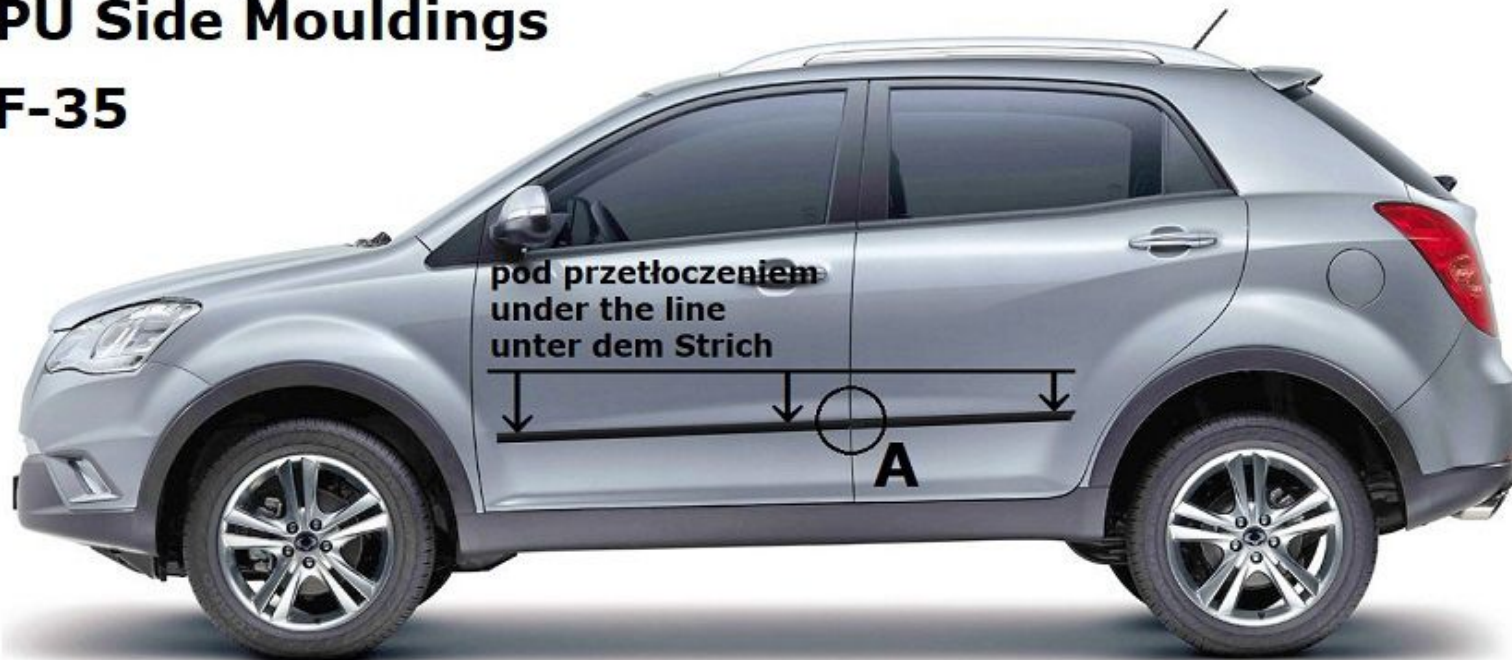

ledere cm goed aandrukken !!  
Press very carefully every cm !!  
Sehr fest andrücken jeden cm !!

